

Part Number AW139
Description POD Packing
Procedure
Box Part Number 600.1403
Dimension NA
Other Packaging NA
Dimension NA
Logo Decals NA

NOTE: This procedure apply to all the STC models, except A109.

Materials to use:



Foam
Roll



Bubble Wrap
Roll



Tape Gun



Siscors



Instapak
Sealed Air



Woodcrate
600.1403

1. Cut a long section of foam, in order to roll the POD inside the protecting material.
2. Cover all edges of the POD using the foam roll.
3. Find a woodcrate 600.1403 and inspect it for any issues
4. Add few sections of bubble wrap or foam along the floor of the box to cover the product as required.



Revision: A
Date:7/11/2022

Part Number **AW139**

Description **POD Packing Procedure**

Box Part Number **600.1403**

Dimension **NA**

Other Packaging **NA**


Dimension **NA**

Logo Decals **NA**

5. Wrap the product using the protecting materials, create a whitth barrier and avoid the direct contact with the box (two complete turns at least).



6. Place the wrapped product inside the box (600.1403), secure the producto with the velcro cords

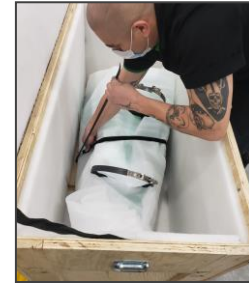

7. Ad several Instapak Bags in any open space trying to avoid movement of the product, and finally close the box



Revision: A
Date:7/11/2022